

# TRAY WASH

MACHINE DISHWASH DETERGENT - SANITISER



CODE: F26

ALUMINIUM SAFE • NON-FOAMING •  
FREE RINSING • EFFECTIVE IN HARD AND SOFT WATER  
• REDUCES SCALE BUILD UP • REMOVES STAINING

## RECOMMENDED USE

All machine wash applications,

### USE FOR:

Utensils, aluminium trays, glassware, crockery, cutlery, stainless steel equipment,

## DIRECTIONS FOR USE

For use in all automatic machine dish washing applications.

Use in conjunction with **PARA GLEAM RINSE** (Code F06).

**Machine Application:** Attach pick-up tube to container and adjust dosage valve to 1-2%.

TRAY WASH is designed to be used in conjunction with Paragons Automatic Dosing System.

Optimum working temperature: 60-80 °C.

**N.B.** Items made from glass or aluminium should only be cleaned with Tray Wash through a dishwashing machine.



## PACK SIZES




Packed 5L, 10L or 20L

## HEALTH + SAFETY

**EYES:** Rinse splashes to eyes, wash with water immediately.

**PPE:** Wear protective gloves  
If splashes are likely to occur wear glasses.

For full Health & Safety information refer to the Safety Data Sheet.

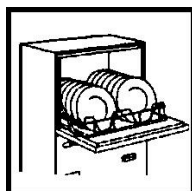

IN USE  
RISK LEVEL



pH CONCENTRATE



PARAGON PRODUCTS (UK) LTD, CHESTERFIELD, S41 9QJ  
01246 944 866 | sales@paragongroup.co.uk  
www.paragongroup.co.uk